

SMK JUNCTION BOX

Replacement Instructions



To ensure a proper seal, you must **USE THIS COMPLETE ASSEMBLY AND RE-TERMINATE** the Ethernet cable. Do not use the existing bottom cap from the old Junction Box nor the existing RJ45 termination or your warranty will be void.

Step 1. Loosen the cord grip and remove cap.

Step 2. Cut off the RJ45 connector below the cord grip indentation. Remove old cap.



Step 4. Insert cable into new cap and terminate with the RJ45 connector.

Step 5. Tighten cap, then tighten cord grip to 30 inch lbs, max torq.

Step 6. Insert the SMK Junction Box into the bottom of the pole.